See Fig. 42

This design is obtained by using pattern cam No. 1 for the petals and No. 8 for the flower buds.

Start sewing the leaves at the stem, using pattern cam No. 1 with pattern elongator set at No. 3. Sew to cam mark "W." Turn pattern elongator to "H" and continue to sew until about ¼" from the end of leaf. Turn pattern elongator back to No. 3 and sew until cam mark "N" is even with cam follower (F) Fig. 20.

Repeat the above for each leaf desired.

Use narrow zig zag satin stitch for stems.

Use cam No. 8 to form flower buds and space as desired.

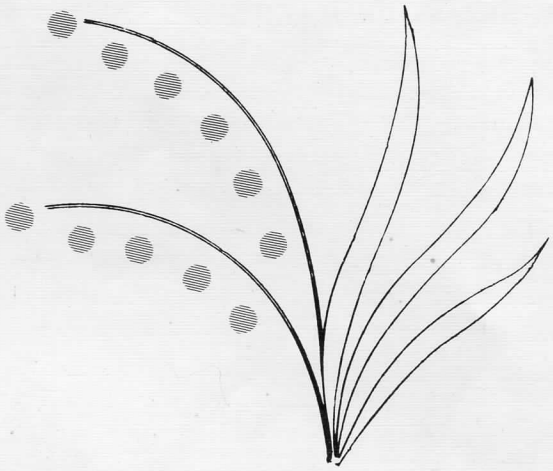

Fig. 42

See Fig. 43

This design is created by using a wide satin stitch (see page 14) for the flower pot. The stems are created by using a No. 3 zig zag stitch with the stitch length regulator set at No. 4 and a double row of straight stitching through the center.

The petals and leaves are created by using pattern cam No. 1 and changing pattern elongator to the desired length for each petal.

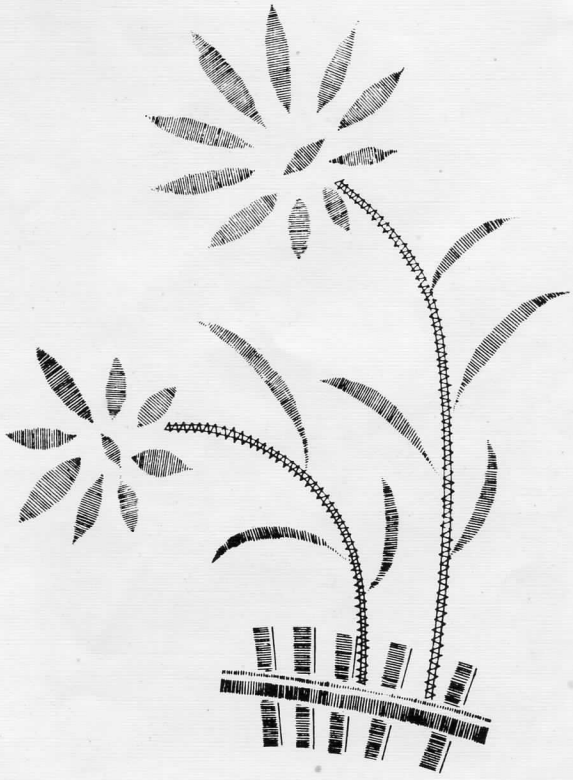

Fig. 43